

INFERNO MAINTENANCE GUIDE



**WOLVERINE
AIRSOFT**





Begin by disassembling your Inferno unit by unscrewing the two halves counterclockwise.





Pull nozzle and baffle assembly off of the valve body.



Pay close attention to the 1mm x 10mm oring
Around the nozzle and do not lose it.



Here are all the loose parts after you have completely disassembled the unit



Lubricate* the 1.5mm x 16mm oring located below the threads and the 1.2mm x 9mm oring located above the threads.



*Wolverine Airsoft suggests TechT GunSav for oring lubrication.



Lubricate the 1.5mm x 11mm oring around the nozzle base.



Your Inferno is ready to reassemble. Please remember to install the 1mm x 10mm oring around the nozzle during final assembly.

Your Inferno is now ready to reassemble. Do so by screwing the two halves together clockwise.



Thank you for purchasing from Wolverine Airsoft!

For more information:

- Visit www.wolverineairsoft.com
- Follow us on any social media outlet
- Contact us:
 - Email: tech@wolverineairsoft.com
 - Phone: (423) 398 - 5985